

150 SERIES ADJUSTABLE BASE

info@lucidmattress.com
888-975-8243

SERIAL NO.



OWNER'S MANUAL

150 SERIES ADJUSTABLE BASE

150 SERIES ADJUSTABLE BASE

CONTENTS

Safety & Warranty Warnings	04
Overview & Parts List	06
Assembly	08
Remote Control	12
Remote Control Pairing	14
Synchronizing Two Bases	16
Testing All Functions	18
Troubleshooting	19
Warranty	20

Safety & Warranty Warnings

IMPORTANT: PLEASE READ ALL INFORMATION CAREFULLY BEFORE USING THIS PRODUCT. SAVE THESE INSTRUCTIONS.

WARRANTY WARNINGS

Do not open or tamper with control box, motors, or remote. The warranty will be void if the internal workings of these components are tampered with.

SAFETY WARNINGS

- Do not use bed outdoors.
- Using bed with oxygen administering equipment other than the nasal masked type creates a possible fire hazard.
- When using nasal or masked type administering equipment, route and secure oxygen or air tubing properly to ensure that tubing does not become entangled or damaged during normal operation of the bed.
- Keep moving parts free of obstruction during bed operation (including sheets, clothing, tubing, wiring, and products using electric power cords).

SAFE OPERATION

- Use caution when having liquids in or around the bed to ensure no spilling occurs. In case of spillage, stand in a dry, clean area of the floor and unplug the bed immediately. Clean up spill and allow the area around bed to dry thoroughly before using the electric controls again. Do not eat or drink hot liquids while operating the bed.
- Do not allow children or individuals with disabilities to operate the bed without adult supervision.
- Do not allow any person or pet under the bed at any time.
- During bed operation, make sure body is positioned within the confines of the bed. Do not place extremities over the sides of the bed when operating bed functions.
- After power foundation assembly is completed, operate remote control to ensure proper functions.
- Distribute body weight evenly over bed surface. Do not place entire weight on head or foot sections of the bed, during reposition and entering or exiting bed.

WEIGHT LIMITS

- This product is not rated to support weights in excess of:

750 lbs (340.2 kgs)
- This limit is inclusive of the mattress and bedding. The bed will structurally support this weight, provided it is evenly distributed across the foundation. The power foundation is not designed to support or lift this amount in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

HOSPITAL USE DISCLAIMER

This power foundation is designed for residential use only. It is not approved for hospital use and does not comply with hospital standards.

PRODUCT RATING

The motors are not designed to operate continuously for more than (1) minute in an (8) minute time period. Attempting to exceed this rating will shorten the life expectancy of the foundation and will void the warranty.

FCC COMPLIANCE


- Operates on 2.4 GHz frequency transmitter
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- To comply with FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void user's right to operate the device.

Overview & Parts List

GET TO KNOW YOUR ADJUSTABLE BASE

Before beginning assembly of your 150 Series Adjustable Base, please take a moment to familiarize yourself with the parts and location of components, as explained here.

If any parts or components are missing, or are different than shown in the adjacent image, do not attempt to complete the assembly process and contact customer support by calling 888-975-8243 or emailing info@lucidmattress.com

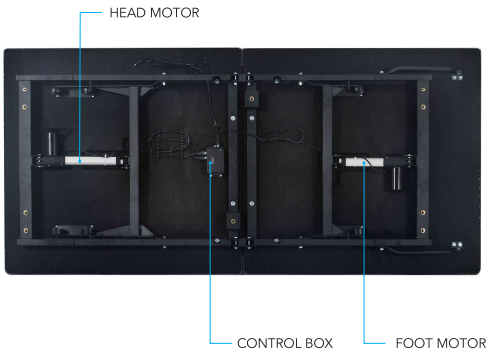

WIRELESS REMOTE



RETAINER BAR



12" LEGS



POWER CORD




POWER SUPPLY BOX




Assembly

NOTES

1.



Two people are required to assemble this adjustable base.
2.



Open the carton in the flat position, bottom facing up, to avoid damage.




STEP 1

Place the box in the room the bed will be used with the bottom of the box facing up. Carefully remove packaging material, taking care not to puncture the box with any sharp objects.

STEP 2

Remove the bed base from the box and set mattress (top) side down on the floor. Remove all plastic and zip ties. All components and parts are located in the underside of the base. Remove attached parts and set aside in preparation for assembly. Check to make sure all parts have been included and are not damaged (see page 7 for a list of all parts and components).

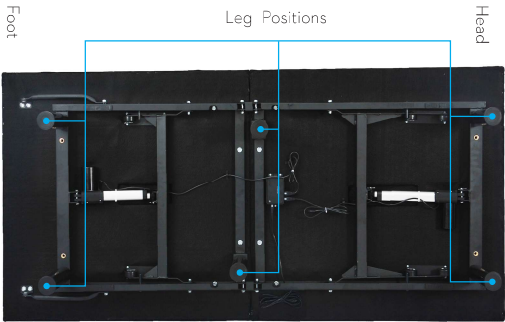

STEP 3

To install the six (6) legs, thread the bolt of the leg into the frame and tighten by hand. Note that there are two location options for each leg, an outside placement or an inside placement.

Note: Ensure the bottom of each leg has an end cap attached



STEP 4


Install the power cord by connecting the cord jack to the receptacle on the bed motor. Be sure the cord is connected completely and securely.

Assembly, ctd.



STEP 5

With two (2) to four (4) people, lift the bed by the metal frame and turn it over so the mattress (top) side is facing up. Take caution not to lift the bed with the fabric, or to use the legs as pivot points causing angled pressure as this may cause damage. Move the bed to the desired location.

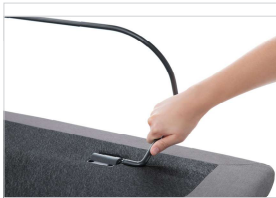

STEP 6

To install the mattress retainer bar, insert one end of the retainer bar in its respective slot until it slides fully into place. Flex retainer bar to insert the other end on the other side.



STEP 7

Plug the power cord into the wall outlet and run the test on pages 18 of this manual. You may want to familiarize yourself with the remote control functions (pages 12 – 14) prior to running the test.


Remote Control

OVERVIEW

All of the functions of the bed can be operated with the remote control. The remote control comes with pre-programmed buttons that will automatically adjust when pressed, or you can manually control adjustments using the arrow buttons on the remote control. See the diagram to the right for a complete list of remote control functions.

REMOTE CONTROL BATTERY INSTALLATION

Remove the battery cover on the back side of the remote control. Insert the two included AAA batteries.

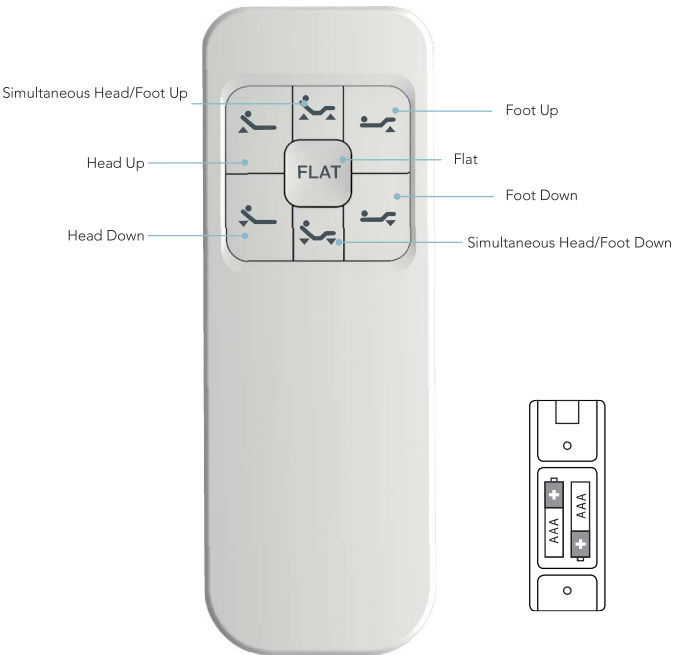

Remote Control Pairing

OVERVIEW

The original remote that comes in the box is already paired to the foundation. No further action is required. In the event that the remote is not paired with the base, begin by checking the following.

STEP 1

Ensure the remote batteries are functioning. Replace if necessary.

STEP 2

Unplug power cord from wall, wait a few seconds and then plug back in.

STEP 3

Within 10 seconds press and hold the Head Up and Foot Up buttons simultaneously until LED light on the control box flashes.

Synchronizing Two Bases

For Twin XL bases only

OVERVIEW

Two Twin XL bases may be placed next to each other to form a King. Both sides can be operated independently with their own remotes or, if desired, a single remote can be used with both bases. Using a single remote for both bases will result in the bases moving jointly.

OPTION 1: WIRELESS

PAIR SINGLE REMOTE TO OPERATE TWO BASES SIMULTANEOUSLY

STEP 1

Ensure both bases (A & B) are plugged into a power source and both in the flat position.

STEP 2

Make sure Remote A was already paired to Base A and Remote B was paired to Base B. If not, pair them by following the instructions found on page 14.

STEP 3

After remotes are paired to their respective bases, pair Remote A to Base B (see page 14). Both bases can now be operated by Remote A.

PAIR SECOND REMOTE TO OPERATE TWO BASES SIMULTANEOUSLY

STEP 1

On Remote B, press and hold the Head Down and Foot Down buttons simultaneously. The remote backlit LEDs will turn on and remain illuminated.

STEP 2

Within 10 seconds, press and hold the Head Up and Foot Up buttons on Remote A until the backlit LEDs on Remote B start to flash. Now both remotes should be able to operate both bases simultaneously.

NOTE: To operate the beds separately again, press the Head Up and Foot Down simultaneously on Remote B. The remote backlit LEDs will start to flash. Follow original pairing instructions on page 14 to pair to desired base.



Test All Functions

OVERVIEW

To ensure proper setup, use remote and test all functions for 3 seconds.

IMPORTANT: Always return the base to the flat position when switching between preset options.

- ☐ Head Up
- ☐ Head Down
- ☐ Foot Up
- ☐ Foot Down
- ☐ Flat



Troubleshooting

PROBLEM	POSSIBLE SOLUTION
No features of the base will activate.	Ensure that all wired connections are secured below the bed base. Unplug the power cord, wait 30 seconds and plug back in to reset electric components. The surge protection or the electrical outlet may be defective. Test the outlet by plugging in another working appliance.
The remote control won't operate the bed functions:	Make sure the batteries are installed correctly or install two new AAA batteries into the remote control. Ensure the remote control is synced with the control box on the bed (see pages 14).
If one or more functions of the bed have stopped working:	Check under the bed base to verify the wired connections are secure and there are no cords or bedding obstructing the movement of the base.

Warranty Information

5 YEAR LIMITED WARRANTY

WHAT IS COVERED

This warranty covers any defects in materials or workmanship under the conditions and exceptions stated below and applies only to the original purchaser. The warranty is void if purchased or transported outside the USA. This warranty excludes commercial use.

HOW LONG COVERAGE LASTS

This warranty runs for up to five (5) years from the date of purchase, according to the tiers set forth below.

WHAT LUCID® WILL DO

Lucid® is the administrator of the warranty for the 150 Series Adjustable Base.

YEAR 1:
During the period of one (1) year from the date of purchase, LUCID® will offer replacement parts for any defective part to the purchaser. The purchaser shall bear all service, transportation, labor, and shipping costs associated with the repair or replacement of the defective part(s).

YEARS 2-5:
During the years two (2) through five (5) LUCID® will offer replacement parts for any mechanical bed part (excluding electronics, electrical components, and drive motors). Purchaser shall pay 1/4th of the replacement cost of the defective part multiplied by the number of years since 1 year after

the warranty commencement date, and LUCID® shall bear the remainder of the cost of the replacement part. The purchaser shall bear all service, transportation, labor, and shipping costs associated with the repair or replacement of the defective part(s). At the sole discretion and direction of the manufacturer, parts demonstrated to be defective must be returned. The manufacturer will arrange all return shipping.

HOW TO GET SERVICE

E-mail "warranty@lucidmattress.com" to submit your warranty claim. Please keep your receipt so that we may process your warranty request.

HOW STATE LAW APPLIES

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WARRANTY LIMITATIONS

Purchaser must follow troubleshooting procedures as set forth by the manufacturer or its agents before warranty coverage may be granted.

At the sole discretion and direction of the manufacturer, parts demonstrated to be defective must be returned. The manufacturer will arrange all return shipping.

Warranty is void if purchased or transported outside the USA.

The foregoing warranty shall be exclusive and in lieu of any other warranty, express or implied, including warranties of merchantability and fitness for a particular purpose and all other warranties otherwise arising by operation of law, course of dealing, custom, trade, or otherwise. LUCID® shall not be liable for any consequential damages or losses arising from the purchase, installation and/or use of this product.

Notes

To assist with warranty claims, please keep your receipt and record the following:

DATE OF PURCHASE _____

PLACE OF PURCHASE _____

PO # (found on shipping box label) _____

SERIAL # (found on back cover of this manual) _____

ADDITIONAL NOTES _____
